 


Rellorus

Heated Throw Blanket

Model: OB22-001A

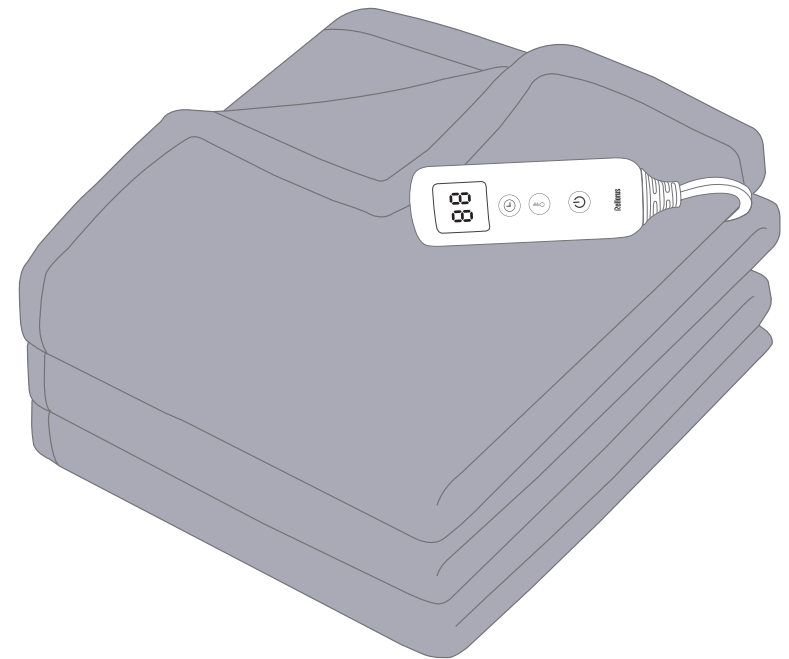

Manufacturer: Shenzhen Yilan Network Technology Co., Ltd.
Address: A905, Bldg. 9, Jindi Kaixuan Plaza, 31 Longcheng Ave.,
Longgang St., Longgang, Shenzhen, CHINA 518000
Service Email: support@rellorushome.com
<https://www.homyeko.com>

Made in China



Intertek
5012640

USER GUIDE

CONTENTS

Safety Instructions	01
Features	03
Specifications	03
Controller Diagram	04
Package Contents	04
How to Use	05
Cleaning & Maintenance	06
Troubleshooting	08
Warranty & Support	10
Statement	10

IMPORTANT SAFETY INSTRUCTIONS













DANGER: TO REDUCE RISKS OF BURNS, ELECTRIC SHOCK, FIRE AND PERSONAL INJURY, THIS PRODUCT MUST BE USED IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS:

01. READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT.
02. THE PRODUCT IS DESIGNED ONLY TO WARM UP THE HUMAN BODY.
03. DO NOT USE ON PETS.
04. DO NOT USE ON PEOPLE INSENSITIVE TO HEAT OR VULNERABLE PEOPLE UNABLE TO REACT TO OVER-HEATING.
05. THIS PRODUCT SHOULD NOT BE USED ON VERY YOUNG CHILDREN (0-3 YEARS OLD).
06. THIS PRODUCT CAN BE USED BY YOUNG CHILDREN (3-8 YEARS OLD) ONLY IF THE CONTROLLER HAS BEEN SET BY AN ADULT RESPONSIBLE TO THEIR SAFETY AND IF THEY HAVE BEEN GIVEN ADEQUATE INSTRUCTIONS ON HOW TO USE IT SAFELY.
07. THIS PRODUCT CAN BE USED BY CHILDREN OVER THE AGE OF 8, PEOPLE WITH REDUCED PHYSICAL, SENSORY OR MENTAL SKILLS AND PEOPLE LACKING EXPERIENCE OR KNOWLEDGE IF THEY ARE SUPERVISED AND HAVE BEEN INSTRUCTED ON HOW TO USE IT SAFELY, FULLY AWARE OF THE CONSEQUENT RISKS OF USE.
08. CHILDREN SHOULD NOT PLAY WITH THE PRODUCT.
09. CLEANING AND MAINTENANCE MUST NOT BE PERFORMED BY CHILDREN UNLESS SUPERVISED.
10. THE PRODUCT IS NOT DESIGNED FOR MEDICAL USE IN HOSPITALS.
11. DO NOT PUNCTURE; DO NOT FASTEN IN PLACE USING PINS OR OTHER METALLIC MEANS.
12. DO NOT USE WHEN FOLDED OR BUNCHED UP.
13. DO NOT USE IF WET.
14. THE PRODUCT SHOULD ONLY BE USED IN CONJUNCTION WITH THE SPECIFIED CONTROLLER.
15. THE ELECTRICAL AND MAGNETIC FIELDS EMITTED BY THE PRODUCT MAY INTERFERE WITH THE FUNCTIONS OF MEDICAL DEVICES LIKE A PACEMAKER. PLEASE CONSULT YOUR DOCTOR BEFORE USE IF YOU ARE EQUIPPED WITH A MEDICAL DEVICE.
16. DO NOT PULL, TWIST OR MAKE SHARP BENDS ON THE CORDS.
17. PLEASE CHECK THE PRODUCT FREQUENTLY FOR SIGNS OF DAMAGE OR WEAR AND TEAR. IF SUCH SIGNS ARE EVIDENT, IF THE PRODUCT HAS BEEN USED INCORRECTLY OR IF IT NO LONGER HEATS UP, IT MUST BE CHECKED BY THE MANUFACTURER BEFORE BEING SWITCHED ON AGAIN. THERE ARE NO USER SERVICEABLE PARTS.

18. IF THE MAINS CONNECTION CORD IS DAMAGED, IT MUST BE DISPOSED OF; IF THE CORD CANNOT BE REMOVED FROM THE PRODUCT, THE PRODUCT SHOULD BE DISPOSED OF ALONG WITH THE CORD.
19. THE ELECTRONIC COMPONENTS IN THE CONTROLLER WOULD WARM UP WHEN THE PRODUCT IS IN USE. FOR THIS REASON, THE CONTROLLER MUST NEVER BE COVERED WHILE IN USE.
20. DO NOT USE IN AN ATMOSPHERE WITH OVERLY ABUNDANT OXYGEN.
21. UNPLUG WHEN NOT IN USE AND NEVER LEAVE UNATTENDED WHILE USING, ESPECIALLY WHILE CHILDREN ARE PRESENT.
22. NEVER PULL BY THE CORD OR USE THE CORD AS A HANDLE; DO NOT PINCH THE CORD.
23. USE THE PRODUCT ONLY AT RATED VOLTAGE AS MARKED ON THE PRODUCT. IT'S RECOMMENDED NOT TO USE WITH GENERATORS AND POWER CONVERTERS.
24. DO NOT USE WITH LINIMENT, SALVE OR OINTMENT PREPARATIONS.
25. IF THE PRODUCT IS PROVIDED WITH MAGNETIC CLOSURE, DO NOT USE IF YOU HAVE A PACEMAKER OR OTHER MEDICAL DEVICES SENSITIVE TO MAGNETS.

HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

Symbol Explanation			
	Read all the instructions.		Gentle wash cycle in water at 30°C
	Do not puncture.		Do not bleach.
	Do not use if folded or creased.		Do not tumble dry.
	Not suitable for very young children (0-3 years).		Do not iron.
	Dispose of the packing in an eco-friendly manner.		Do not dry clean.
	WARNING: Warning of risks of injury or health hazards.		
	CAUTION: Safety information about possible damage to appliance / accessories.		


Feature

- Full body size (50 inches x 60 inches)
- Made of luxurious softness of flannel facing
- 10 adjustable heating levels
- 6.56 ft length detachable power cord
- 1-4hr Timer
- Overheating protection

Specifications

Model	OB22-001A
Name	Heated Throw Blanket
Input voltage	120V ~ 60Hz
Rated power consumption	120W
Heating level	10 levels (1,2,3,4,5,6,7,8,9,H)
Auto-off timing settings (hour)	4 settings (1,2,3,4)
Product dimensions	50 inches x 60 inches / 127 cm * 153 cm
Materials	Flannel

Controller Diagram

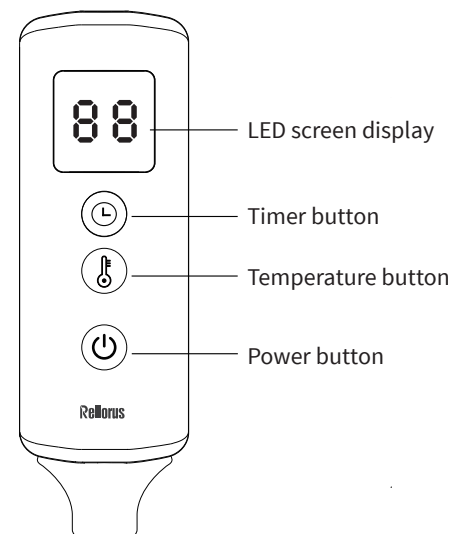

Package Contents

- 1 x Rellorus Heated throw blanket
- 1 x Hand-held controller
- 1 x User Guide

(Note: Please check first to make sure the product is complete without any damage. If you have any doubt, please do not use and contact us.)

How to Use

WARNING: This product is equipped with a SAFETY SYSTEM. This sensor technology prevents the blanket surface from getting overheated entirely and would automatically switch off it when there is a malfunction. Please note that for safety, the product could not be operated any longer after the malfunction. If the overheat protection is activated, please contact us.


1. ⏻ On/Off

Important! Do not insert the main plug inside the outlet unless connecting the controller to the heated blanket. Align the coupler with the coupler connector first, then gently push to lock position (as shown in the below images).

Then connect the controller to the power supply.

Press the ⏻, the default H heating mode and 4 hr timers are active. Then "H" will be displayed, which disappear after 1 second, with red dot appearing on the LED screen.

Press the ⏻, the product was turned off. Only the red dot is still displayed, which means the product is standby.

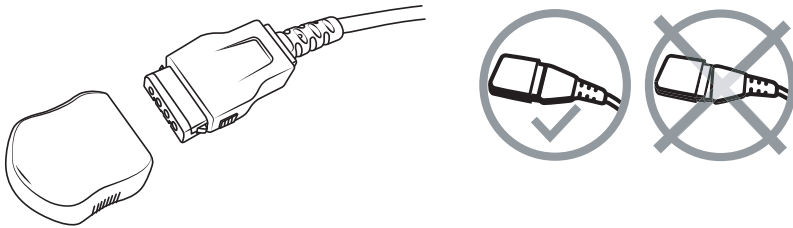

2. 🌡️ Temperature Adjustment

When the product is turned on, the heating level H (113 Fahrenheit) would be activated by default.

Press the 🌡️ to choose the desired heating level among 10 different heating levels (77-113 Fahrenheit).

Short press 🌡️, you can choose the heating level step by step from 1-2-3-...8-9-H-1-2... circularly.

Long press 🌡️, you can get the H heating level directly from any heating level.

User Tips: The fastest way to preheat is to set the product at the highest heating level after turn it on.

3. ⌚ Timer Adjustment

When the product was turned on firstly, the default timer is 4 hr.

Press ⌚ to set the working time mode among 1-2-3-4-1-2-3-4... circularly and the red dot will be displayed during the timer setting. Your selection of time will be confirmed after the digit has flickered for 5 times on the screen.

If there is no timer setting after pressing the ⌚, the timer setting mode will be quit automatically after the digit has flickered for 5 times on the screen.

4. Automatically OFF

When the set timer is run out, the product will stop heating automatically, the controller display will flash "0" in timer settings and the temperature will not be displayed. If you wish to use again, press the "⏻" button, the temperature, and timer setting will be the same as the latest use.

Cleaning and Maintenance



Warning

1. Before cleaning, always remove the mains plug from the outlet first.
2. Then disconnect the controller from the product.



Cleaning

1. Soak the product for 15 minutes first in mild soap and cool water.
2. Machine wash on gentle cycle in water at 30 C for 2 minutes or hand wash.
3. Rinse with fresh, cool water.
4. Machine dry on gentle, cool cycle or hang to dry. (Immediately after washing, reshape the product to its original dimensions and spread it out flat on a clothes horse or clothesline.)

Maintenance

1. Store the product only after it completely cools down and it's completely dry.
2. Loop the cord loosely.
3. Store in an airy, dry environment.

Caution

- **DO NOT** submerge the controller in water. The controller must never contact water or other liquids directly. To clean the controller, use a dry, lint-free cloth.
- **DO NOT** dry clean as dry cleaning solvents may damage the wires.
- **DO NOT** chemically clean (with bleach or cleaning fluids).
- **DO NOT** use a wringer.
- **DO NOT** use clothespins.
- **DO NOT** iron and wring out.
- **DO NOT** use mothballs or sprays of any kind.
- **DO NOT** re-connect or use until COMPLETELY dry.
- **DO NOT** wash the cord or put the cord into water.
- Please note that frequent washing of the product has a negative effect.
- **DO NOT** use commercial dryers or the dryers at your local laundromats, as they would get too hot and can damage the wiring of the product.

Storing

If the product is not to be used for long, we recommend storing in the original package. Make sure the plug is removed from the outlet and that the controller is disconnected from the blanket before storing.

Warning: Make sure the blanket has cooled down before storing. During storage, do not place any object on the product.

Disposing

For eco-friendly reason, the product should be separately disposed of instead of being disposed of as unsorted municipal waste at the end of its service life. Please dispose of properly at the local waste collection site.

Troubleshooting

Problem: The light fails to illuminate on the control unit

Solution: Check that the coupler is connected fully. Check the switch is attached and that the instructions have been followed correctly; Check power supply is functional.

Problem: The product does not produce enough heat or does not work.

Cause: This heating products provide safe heat and protect consumers' skin within temperature range based on international safety standards, which helps avoid low temperature burns. Therefore, the temperature setting is for keeping warm instead of getting hot.

Solution: CAUTION! The following troubleshooting test represents a non-standard use of your product. Do not continue this test for more than thirty (30) minutes. Do not repeat this procedure during actual use. Fold the product with at least four folds. Connect the controller to the blanket, and then plug the controller into a working wall outlet. Set the controller to the highest heat setting and wait for five (5) minutes. Place your hand inside the folds. If you do feel warmth during this test, the product is working properly. Turn the controller OFF. Lay the product out flat. It is safe to resume normal operation after 20 minutes. If no heat is felt during this test, unplug the power cord and contact Customer Support (support@rellorushome.com).

Problem: When receiving the product, it does not work.

Solution: When receiving the product, please take it out from the packing and place it flat (do not fold). Check the coupler and mains plug have been well connected, then switch on to check whether the product works normally or not. For products unable to work normally, please contact our customer service (support@rellorushome.com).

Problem: The product does not heat uniformly.

Cause: Maybe the product was folded or the heating wires are coiled during use.

Solution: Please place the blanket flat for using. The temperature of the body areas that contact the heating zones is higher than the areas do not, which is a normal phenomenon.

Problem: “E” or other symbols indicating improper operation appear when using the product.

Cause: There is a problem with the controller.

Solution: 1. Please check whether the controller is tightly connected to the product. If not, please disconnect the mains plug from the outlet, re-connect the controller and then connect the mains plug back to the outlet.

2. If “E” still exists, please check whether the controller is covered and gets overly hot. If so, please disconnect the mains plug from the outlet, wait until the controller cools down, connect the mains plug back to the outlet, and then restart.

3. If “E” still exists, the overheat protection system might have been activated. Please contact our customer service (support@rellorushome.com).

Problem: The product no longer works after being used for a period of time.

Cause: The product is not operated or washed properly.

Solution: Please contact our customer service: support@rellorushome.com

Problem: The power cord or any wiring is damaged; Damage to the control unit; Fabric rucking or creasing; Wear or tear on the fabric; Heat discoloration of fabric; The product has been misused or accidentally damaged;

Solution: Discontinue use and contact customer support team at support@rellorushome.com

If the above suggestions could not solve the problems, this might result from the permanent switch-off protection via the safety system. In this case, please contact our customer service.

Warranty & Customer support

This product is intended for domestic use only. Rellorus will repair or replace the product, or any part of this product, (excluding batteries) free of charge if within 12 months of the date of purchase, it can be shown to have failed through defective workmanship or materials. This guarantee covers working parts that affect the function of the product. It does not cover cosmetic deterioration caused by fair wear and tear or damage caused by accident or misuse. Rellorus shall not be responsible for any type of incidental, consequential or special damages. Opening or taking apart the product or its components will void the guarantee. Claims under guarantee must be supported by proof of purchase and be returned carriage paid to Rellorus. Care should be taken in packing the product so that it is not damaged while in transit. This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

For questions, support, or warranty claims, contact us at the email address below. Please do include your Amazon order number and product model number.

Customer support: support@rellorushome.com

<https://www.homyeko.com>

Statement

We can only provide after-sale services for the products that are sold by authorized sellers. If you have purchased from an unauthorized seller, please contact them directly for service or warranty issues.

0B22-001A 加热垫 说明书

尺寸：A5

材质：128g哑粉纸

单色印刷

装订方式：骑马订

2022.05.10 V1.0